


# **DISCatcher** **TRAVELER** **PORTABLE DISC GOLF TARGET**



## **Set Up**

---

1. Stand up the DISCatcher Traveler® and pull the legs away from the center.
2. Lift mesh/chain and pull up the center pole while pushing down on the top of the leg assembly until it clicks into place.

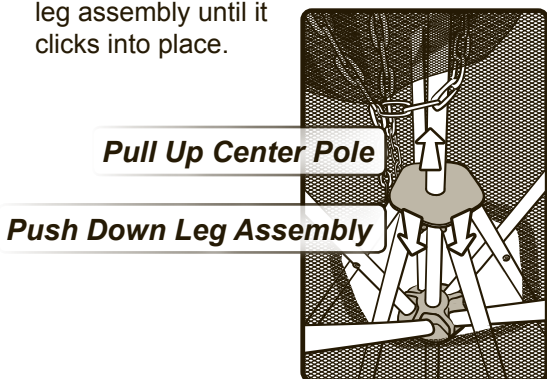

## **Take Down**

---

1. Pull the release pin located under basket area.
2. Lift mesh/chain and push down on the center pole.

